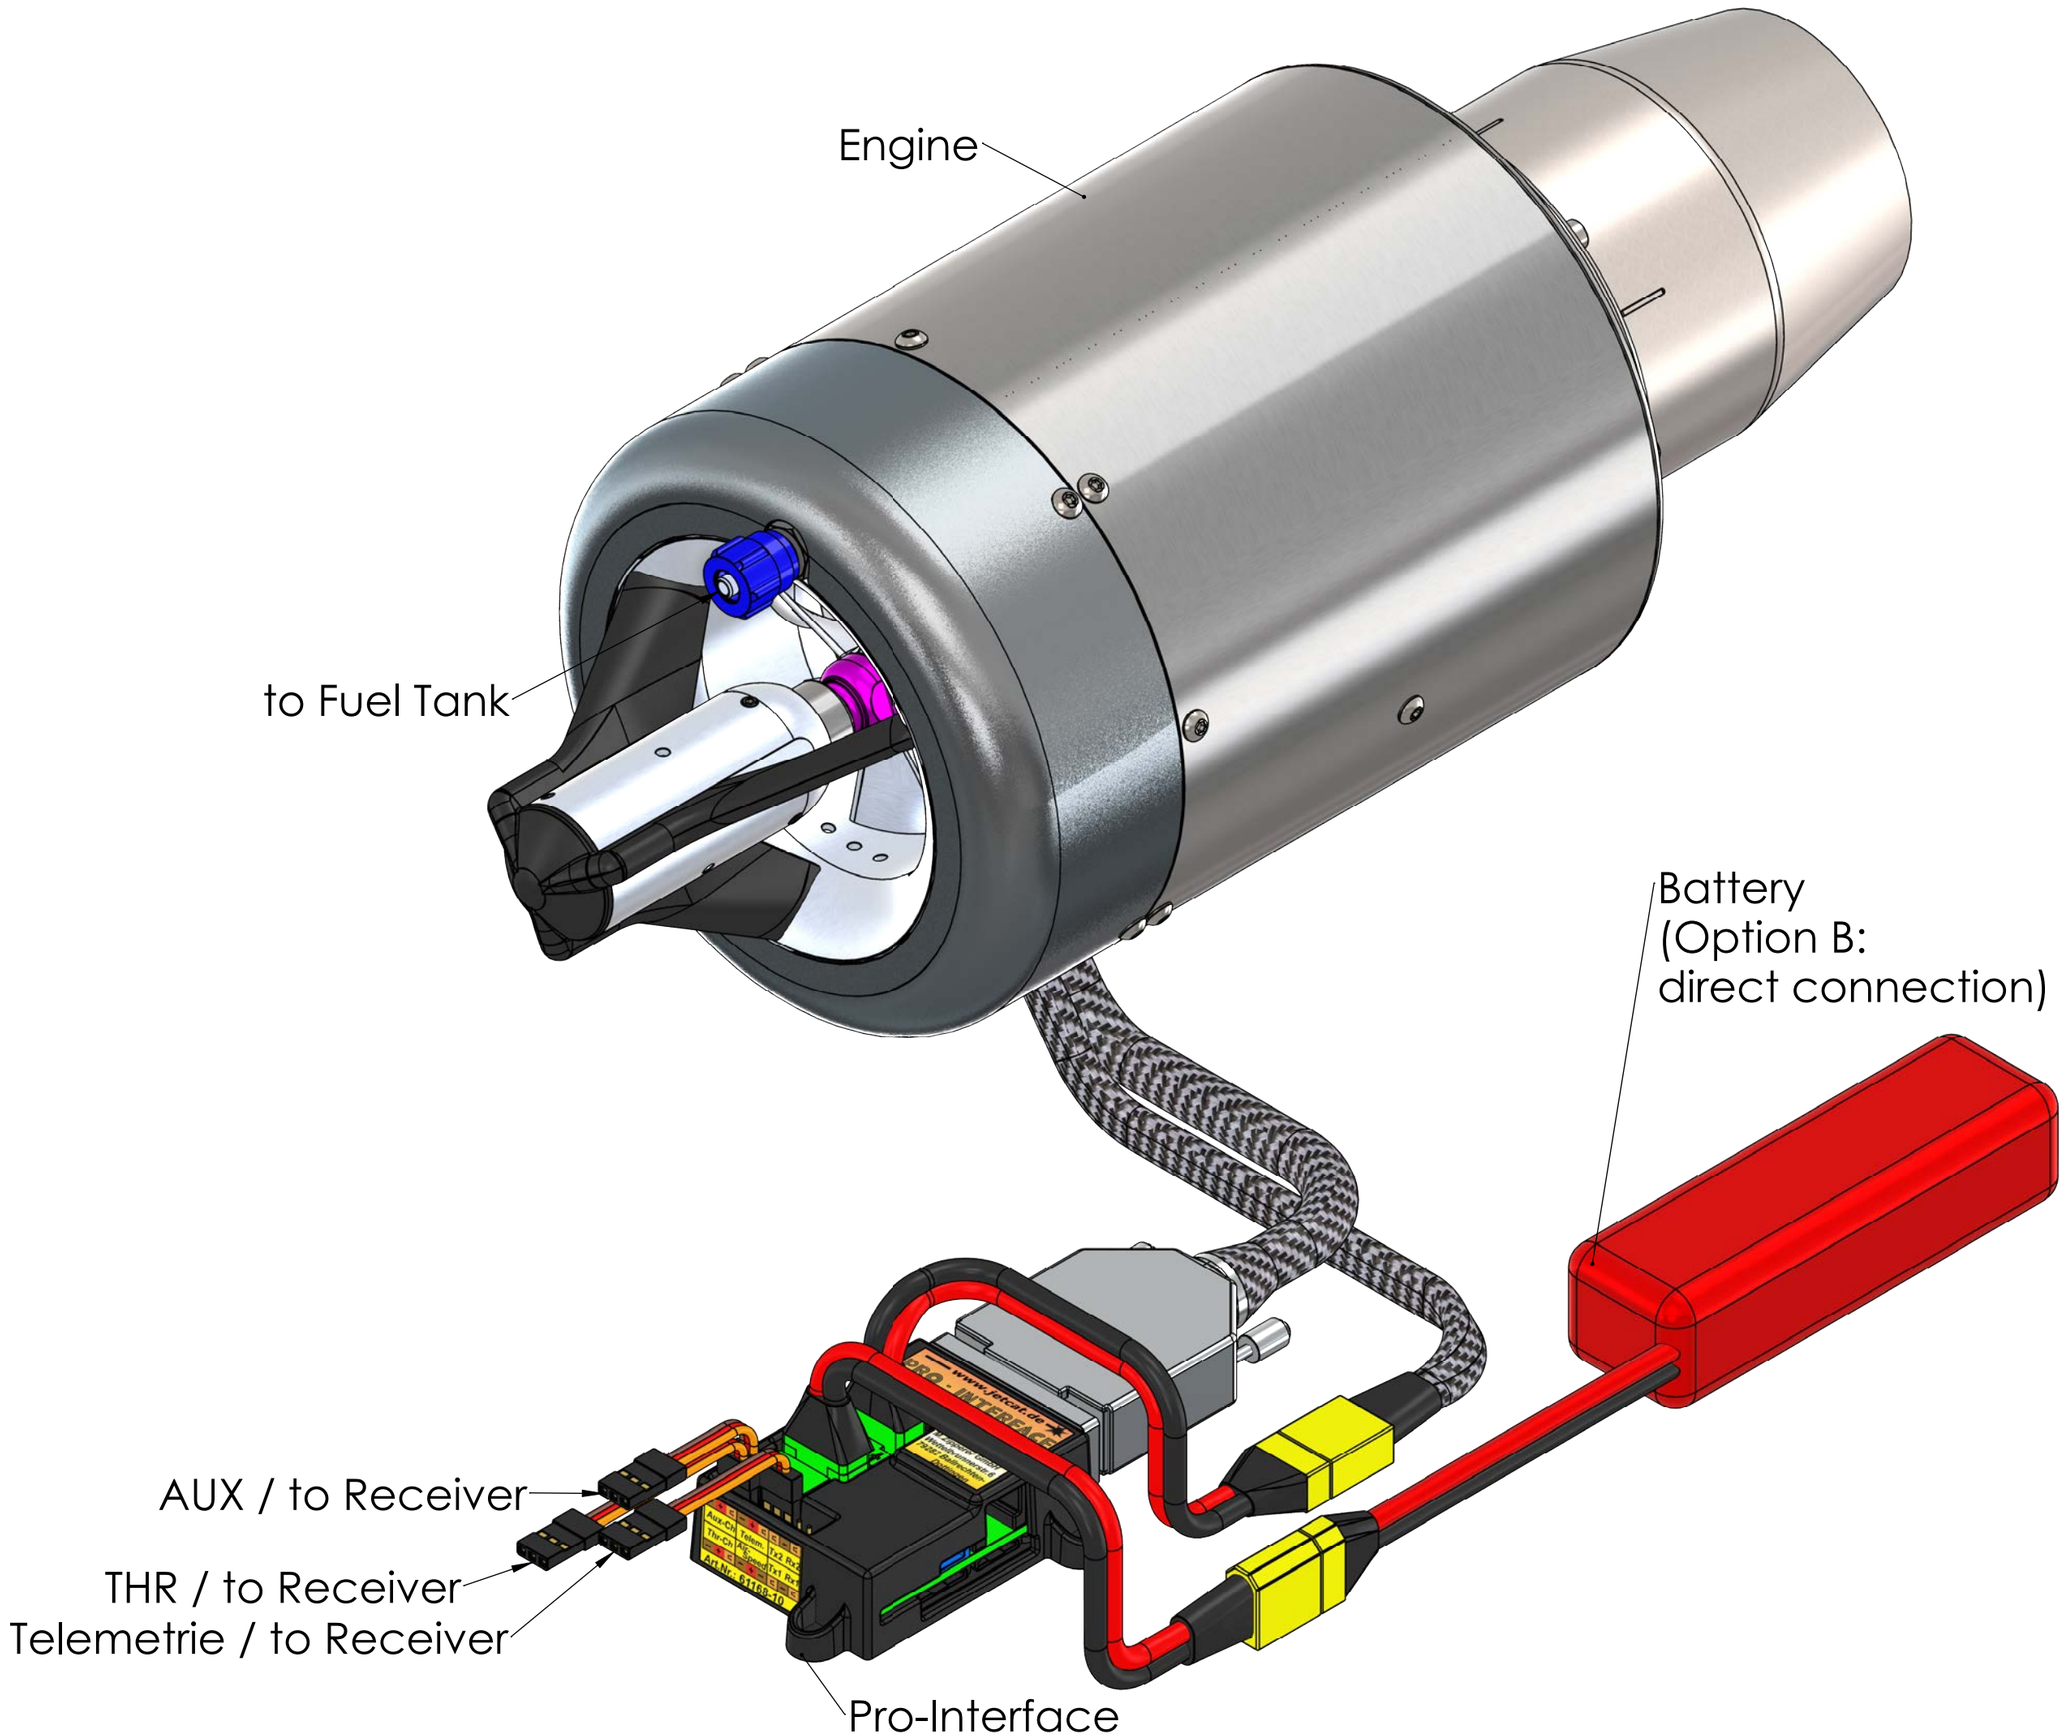
Engine
to Fuel Tank
Battery
(Option B:
direct connection)
AUX / to Receiver
THR / to Receiver
Telemetrie / to Receiver
Pro-Interface